Stone's Furniture Spray is a 'surface shine and spray polish' for all wooden furniture that works extremely well on hardwoods such as Teak, Oak, Mahogany and Walnut giving added depth to tired or jaded surfaces. Stone's Furniture Spray is also an 'all in one' top coat finish for new wood, whether hard or soft

A genuine wax spray that does not contain surfactants, soaps, or silicones. it relies on the cleaning properties of the high quality selected waxes contained in the spray.

Using Stone's Furniture Spray

Shake well before use. Do not use where the temperature is less than 15°C.

Finished surfaces

- Apply Furniture Spray at a distance of 40-50cm from surface.
- Wait 2-3 minutes (depending on conditions).
- · Buff with a lint free cloth to produce a waxy shine.

Unfinished surfaces

- Apply Furniture Spray at a distance of 40-50cm from surface.
- Allow to dry for 4-5 minutes (depending on conditions).
- Buff with a lint free cloth to produce a waxy shine.
- · Repeat if necessary to produce a higher shine.

DANGER **HEALTH & SAFETY**

Contains **HYDROCARBON PROPFILANT**



H229 Pressurised container: may burst if heated.

P102 Keep out of reach of children.

P210 Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking P211 Do not spray on an open flame or other ignition source.

P251 Do not pierce or burn, even after use.


P260 Do not breathe vapour/spray.

P271 Use only outdoors or in a well ventilated area

P410+P412 Protect from sunlight. Do not expose to temperatures exceeding 50°C/122°F.

P501 Dispose of contents/container in accordance with local regulations.

MADE IN ENGLAND by STONE'S OF EXETER Waterloo Road, London NW2 7TX UK Telephone: +44 (0)20 8450 4666 Email: info@stonesfurniturecream.co.uk www.stonesfurniturecream.co.uk

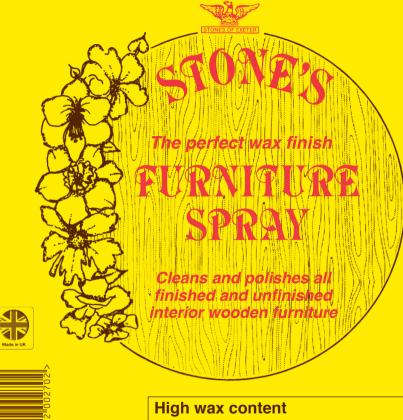

Wax shine

Silicone free



